Honeywell

XE70 SERIES

THAMMANAMAN

Honeywell

T6374/T6375 FAN-COIL THERMOSTATS 4-PIPE FAN-COIL CONTROL

PRODUCT SPECIFICATION SHEET

The T6374 and T6375 are designed to control the valves, or the valves and the fan in 4-pipe fan-coil applications, with the possibility of also being used for control of split units and small air conditioners.

The thermostat operates the on/off valves to provide control at the desired setpoint temperature.

The fan can also be controlled from the thermostat. It is wired to run continuously, and can be switched off with the system ON/OFF switch.

Versions are available with a manual 3-SPEED FAN switch, and with a system ON/OFF switch.

Heat/cool changeover operation is also possible on some versions. This function can be accomplished by a manually operated HEAT/ COOL switch on the front of the thermostat, or in some versions, automatically by means of a fixed deadband built into the thermostat between the heating and cooling setpoints.

FEATURES

XXXXXXXXXXXXX

 Dual diaphragm sensing element ensures close temperature control for all loads and applications

ON OFF


HEAT COO

- Attractive modern styling makes this thermostat ideal for locating in the occupied space, particularly in offices or hotels
- Versions with heat anticipator, which improves temperature control in both heating and cooling operation
- Thermostat mounts directly onto a wall or conduit box
- Slide switches allow manual control of system operation and fan speed
- Versions available with fixed deadband between heating and cooling operation
 - Optional extras available are : - range stops F42006646-001
 - tamperproof cover F42008489-001 (opaque),
 - F42008489-002 (transparent)


SPECIF	ICATION	S ►	40mm		60mm	-			
Model							Features		
	ON/OFF	_{neywell} 3-speed	/Fan/	Heat/Cool	Heat/Cool	eat/Off/	Heat/Fan/	Fixed	Auto
		Fan	Auto/Cont		000	Cool	Cool	Deadband	Change-
	20 25			0					over
130mm	(SPST)	(SPTT)	Auto/Cont, (SPD)	(SPDT)	(DPDT)	(DPTT)	(DPTT)		(Aquastat)
T6374C1004								1	
T6374C1012	- HEAT ON OFF				6	¥		1	
T6375B1021-					1				
T6375B1013	1	`					~		
T6375C1003	1	1			ECH II			1	
T6375D1001	1	1			1			51	
		0					230	5	

Setpoint range	: 1030°C. By means of a large setpoint dial	Wiring :	Up to 9 screw-in terminals per unit, capable of accepting wires up to 1.5
Supply voltage	: 230 V~, 5060 Hz		
Thermostat	: S.P.D.T.		Plastic 2-piece housing
switch		Dimensions :	85 x 130 x 40 mm (w x h x d).
Performance	: Typical differential 1 °C (heating &	Protection class :	IP30
	cooling) at 20°C at 50% load with anticipator connected	Environmental	Operating temperature range 0 to 40°C Shipping and storage temperature range
Electrical ratings	: 4(2) A, 230 V~ Typical loads are fans, zone valves and relays	V V	-20 to 50°C Humidity range 0 to 90% rh, non- condensing
Operational life	: Greater than 100,000 cycles (all loads) for thermostat contacts at 230 V~ Greater than 6,000 operations for all manually operated switches	Approvals :	CE mark, complying with standards EN60730-1 (1995), EN55014-1 (1997), EN55014-2 (1996). Product must be wired as shown for CE
Mounting	: Mounts directly onto wall or wall-box (mounting screws supplied)		compliance.

DIMENSIONS

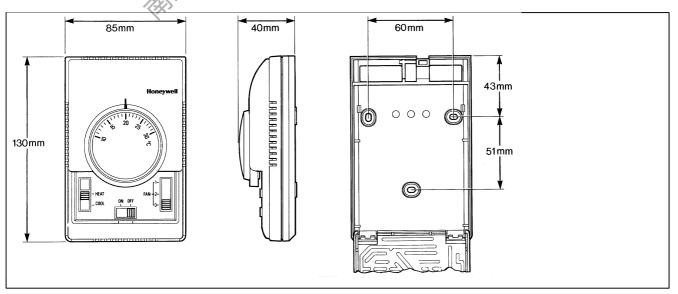

INSTALLATION

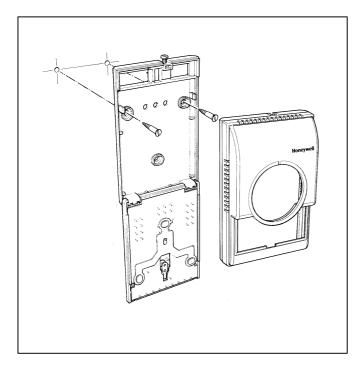

OPERATION

Sensing element

The thermostat sensing element comprises two circular, flexible metal plates welded together at the rims and encapsulating a gas/liquid combination whose pressure changes in response to variations in temperature. This dualdiaphragm expands and contracts with ambient temperature changes to operate a snap-acting switch which controls the heating or cooling circuit.

Heat anticipator

It is recommended that the heat anticipator is always connected for both heating and cooling operation.

APPLICATION

Location

The XE70 Series thermostat is the temperature control element in the fan-coil or air-conditioning system, and must be located in a position with good air circulation, on an inside wall about 1.5 m above the floor to sense the average temperature. Do not position the thermostat in draughts, near hot or cold air sources or where it will be affected by radiant heat from the sun or other appliances.

Mounting the thermostat

Any XE70 Series thermostat can be directly mounted on the wall or on a conduit box (see diagram). Mounting screws are supplied for both alternatives.

Wiring the thermostat_

The standard wiring access is via a hole in the base of the thermostat, near the top edge.

The installer must be a trained service engineer

Disconnect the power supply before beginning installation

Switches

All switches are slide switches for ease of operation.

The ON/OFF switch is a system on/off switch, as it removes power from the thermostat.


The FAN SPEED switch allows selection of 3 different fan speeds, 1 (low), 2 (medium), and 3 (high)

The DPDT HEAT/COOL switch allows selection of either heating or cooling operation. There are 2 output terminals controlled by this switch.

The HEAT/FAN/COOL switch allows selection of either heating or cooling operation, but also has an additional selection position which disables all outputs except that of the fan. The fan can be controlled separately, by the system ON/OFF switch.

		T6374C 1004	T6374C 1012	T6375B 1013	T6375B 1021	T6375C 1003	T6375D 1001
Application	Ventilation 2-pipe fan-coil 4-pipe fan-coil Heatpump Air-conditioner	*	*	*	*	* *	* * *
Control Capability	Heat or Cool Heat/cool Changeover (auto or manual) Fan control (auto or cont) Fan speed control Valve control Compressor control	* auto *	* auto cont *	* manual cont * *	* manual cont * *	* auto cont * *	* auto a or c * *

WIRING

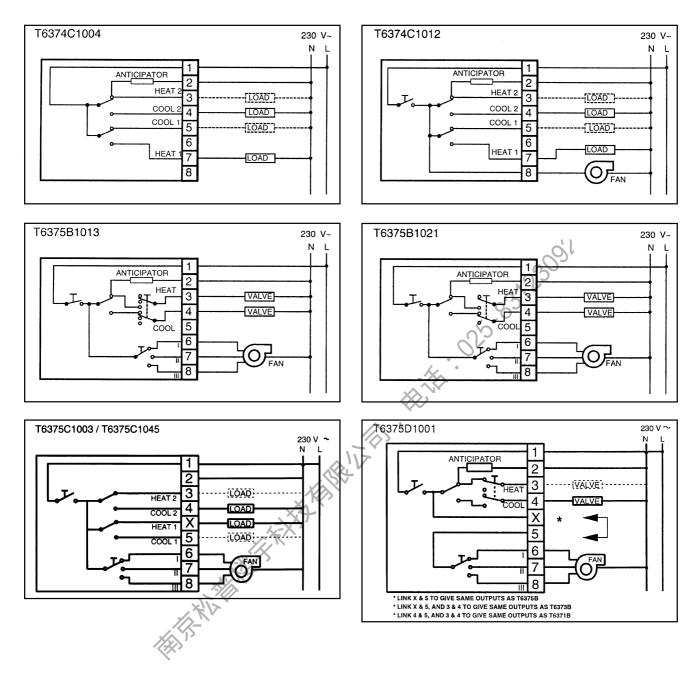

Honeywell Control Systems Limited Newhouse Industrial Estate Motherwell ML1 5SB United Kingdom Honeywell http://europe.hbc.honeywell.com

EN0R8404 R4 1999